


FM4100 INSTALLATION MANUAL

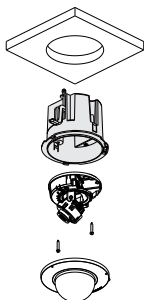


This manual is intended for the users of the FM4100 ceiling mounting bracket. It includes the instructions for mounting the FM4100 ceiling mounting bracket to the ceiling.

- **This bracket is intended to be used with DC-D4213RX. Ask your retailer for details on a specific model and do not use it with other models of cameras.**
- **This installation should be performed by a qualified service personnel in conformance to all local codes.**
- **You may need to reinforce the ceiling. If the ceiling is not strong enough to support the camera, the camera may fall.**
- **Do not use this product for other purposes.**


Mounting

- 1 Make a hole in the ceiling to install the bracket using the provided guide pattern.
- 2 Place the foot of the product as shown in the figure and push it into the ceiling.

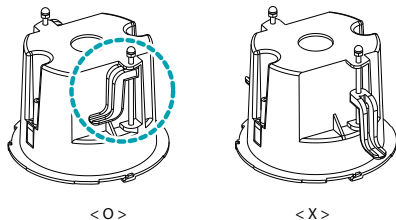


- 3 Mount the bracket to the ceiling, then fix it by turning the screws clockwise.

- Be careful not to tighten the screws with too much force.

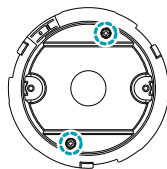


- 4 Assemble the camera body(DC-D4213RX) to the bracket until it clicks.


- When disassembling the product, you can remove the product by pressing the hook with a flat screwdriver.

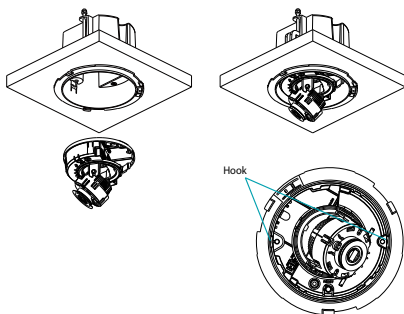

- 5 Use the screws (M4 2ea) provided with the camera to secure on the bracket while it is temporarily fixed with the hook.
- 6 Adjust the angle.

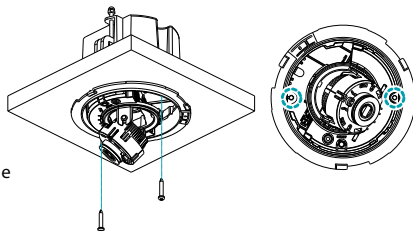

- Make sure that Eva Cushion is assembled and firmly pressed against the camera dome cover, otherwise it will create IR reflection.
 - Adjust the tilt angle not to cause IR reflection.
- 7 Assemble the dome cover to the camera body.

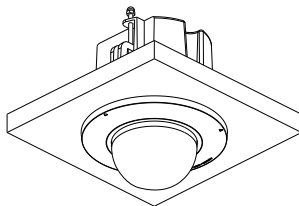

Dimensions

Unit: mm (inch)

