


5. Fold screen material carefully for packing. Please proceed in the following manner:

- 1) Fold the frame and legs with white clean tissue paper-with no printing-placed between folds. Avoid damage to the screen material.
- 2) Clean the fabric, then fold from left to right and continue folding until the fabric is of sufficient size to fit into the case.
- 3) Make certain to keep all material in case for later use and lock the case for security.

Cleaning

Surface can be cleaned as follows:

Using a white clean cloth that is dampened with clear water, gently wipe the area in one direction. Do not use a circular motion.

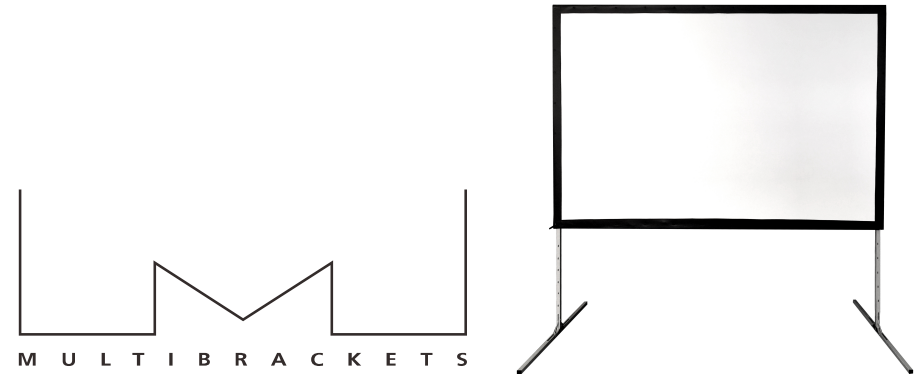


Fast-folding Projection Screen 72"-180"

- ar شاشة العرض الثابتة
- dk Fast projektorskærm
- de Rahmenleinwand
- el Σταθερή Οθόνη Προβολής
- en Fixed Projection Screen
- es Pantalla de proyección fija
- fi Kiinteä valkokangas
- fr Écran de projection fixe
- it Schermo di proiezione fisso
- no Fast projeksjonsskjerm
- pl Ścienne-sufitowy ekran projekcyjny
- ru Проекционный экран постоянный
- se Ramspänd Projektorduk
- tr Sabit Projeksiyon Ekranı
- zh 固定式投影屏幕


1

d

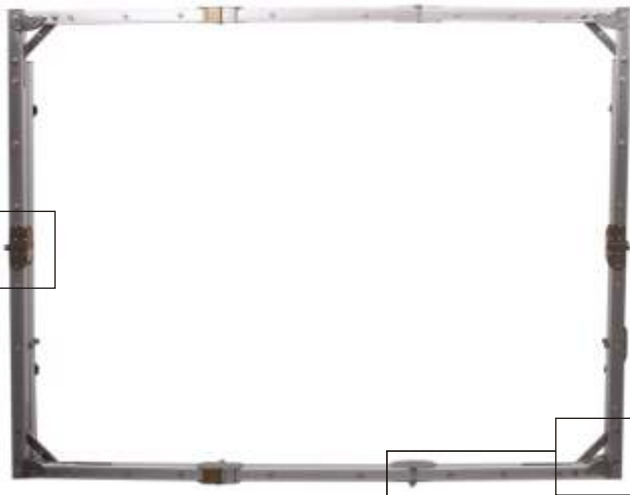

Snap latch

Lock down the corners

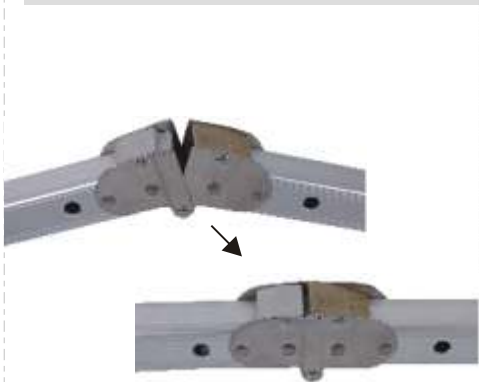


2

Extend and fix the legs


a



b

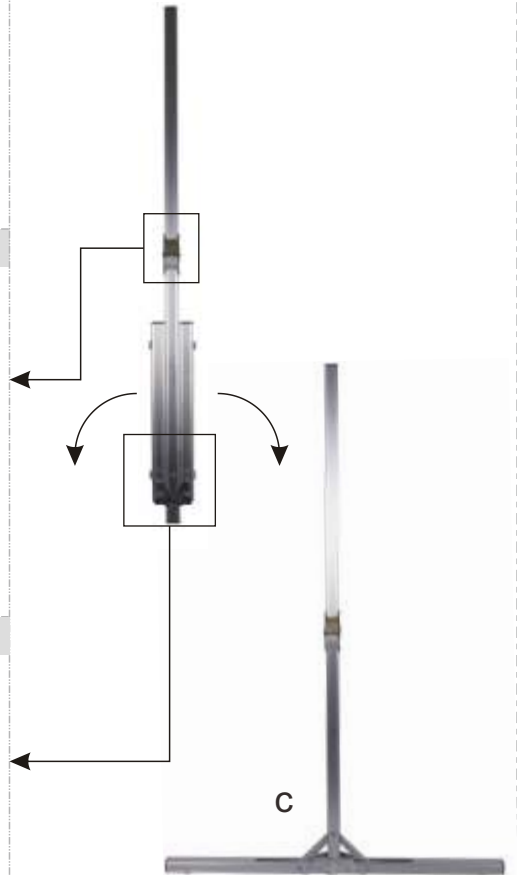

Snap latch


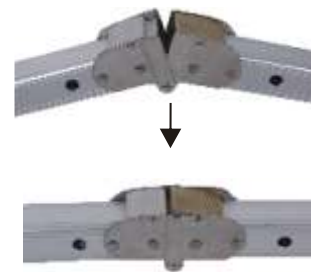


Lock down the corners



3

Screw support legs to frame

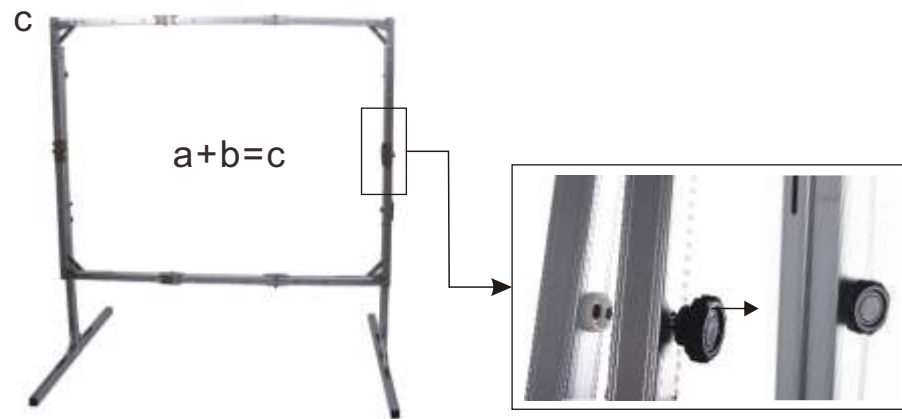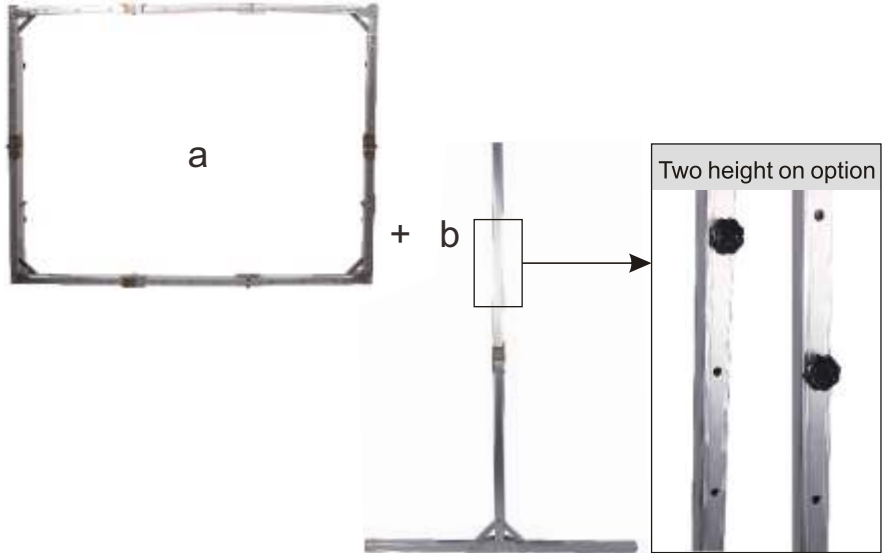

4

Attach screen to frame

