

# URBAN-X Mini - 'Quick Start'



Important Safety Information -  
See Full Instructions



Eye Safety



High Voltage


Instructions (For cable fitted models, go to point 7)

- 1) Remove cover plate (5 screws).
- 2) Strip each of the mains supply wires to 8mm. Feed cable through gland and tighten. (refer to cable preparation diagram below)
- 3) Feed cable and gland through mounting spigot and tighten with nut ~3.5Nm (22mm spanner required).
- 4) Terminate mains supply wires to terminal block.
- 5) Tighten cable to the base plate using restraining clip. Clip out excess cable tie tail.
- 6) Replace cover plate by using screws provided. Tighten to 4Nm.
- 7) Mount unit on appropriate support spigot (size 34-42mm Diameter) and secure with supplied grub screws. Tighten to 17Nm.


Optional DALI - wires should be stripped to 8.5mm-9.5mm and suitably terminated. Connect to the driver terminals labelled DA(BL) Blue.

## Cable preparation diagram:

1.5Nm (20mm spanner required)

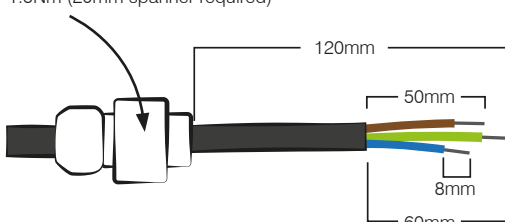

L & N Wires = 50mm    ⊕ = 60mm

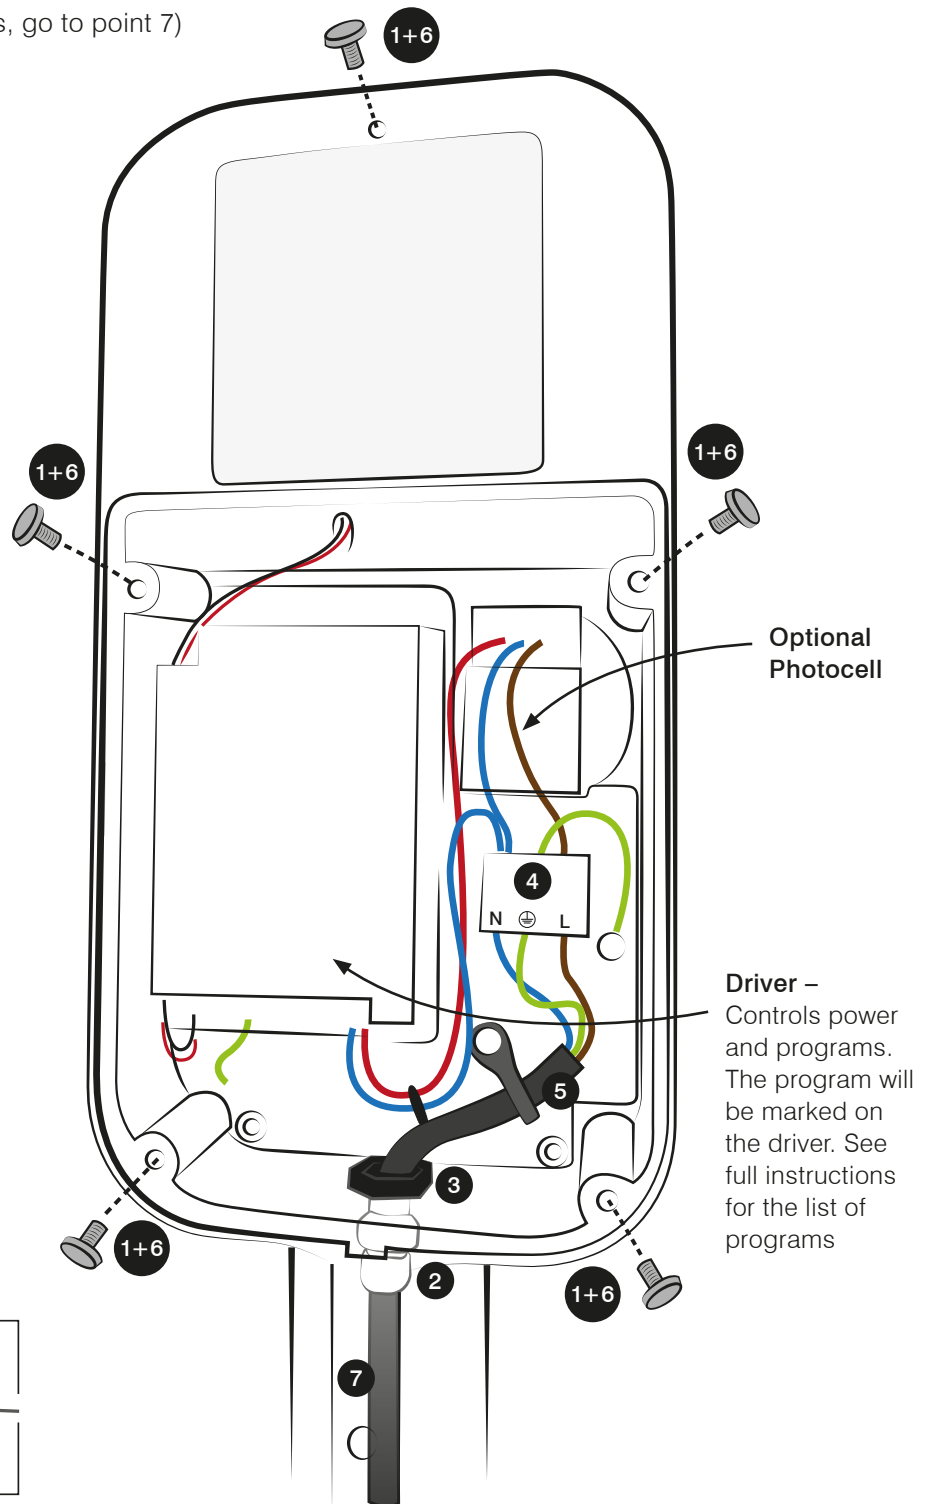

**Driver –**  
Controls power and programs.  
The program will be marked on the driver. See full instructions for the list of programs